













Justify Tear-Off Position

Procedure to move to the tear position in a sound cover or Cabinet to outside position, or to compensate paper tolerances on the tear bar.



 








How to change the Tear Off position:

KEY	Description	Display
	START / STOP	LOCAL 1 ELQ
	MENU	MACRO SELECT
	KEY DOWN	INSTALLATION
	KEY RIGHT	INTERFACE
	KEY DOWN	ADJUSTMENT
	TEAROFF V.POS.	V.POS. = 0
	KEY DOWN / UP	CHANGE VALUE +- 1/60 inch
	KEY RIGHT	TO SELCET HEX DUMP MARKED BY ASTERIX *
	3 TIMES KEY LEFT	INSTALLATION
	KEY DOWN	SAVE
	SAVE	AN ASTERIX IS SET TO SAVE (BLINKS AND SAVE)
	START / STOP	LOCAL 1 ELQ

Justieren der Tear – Off Position

um z.B. die Abreißposition in einer Schalldämmhaube nach außen zu verlegen, oder um Papiertoleranzen an der Abreißkante auszugleichen.

So ändert man die Abreißposition:

Taste	Beschreibung	Anzeige
	START / STOP	STOP 1 ELQ
	MENÜ	AUSWAHL MAKRO
	NACH UNTEN	INSTALATION
	NACH RECHTS	SCHNITTSTELLE
	NACH UNTEN	EINSTELLUNGEN
	TEAROFF V.POS.	V.POS. = 0
	AUF / AB	TEAROFF V-POS. WERT VERÄNDERN +- 1/60 INCH VERSTELLBARE TEAR-OFF POSITION IM BEREICH 0 BIS 6 INCH
	NACH RECHTS	GEWÄHLTE EINSTELLUNG WIRD MIT EINEM * (STERN) MAKIERT
	3 x NACH LINKS	INSTALATION
	NACH UNTEN	MENU SICHERN
	MENU SICHERN	SICHERN WIRD MIT EINE STERN MAKIERT UND BLINKT BEIN SICHERN
	START / STOP	STOP 1 ELQ